 


LESLIE
FOR
X-66CONSOLE CONNECTOR KIT
FOR HAMMOND ORGANS

CONTENTS OF KIT:

1 Console Connector	032698	1 Tremolo-Echo Control
1 6 Conductor Cable	017277	
1 Instructions	032789	brown 032706
3 Insulated Staples	028464	ebony 032714
1 Oiler	053025	ivory 032722
2 Screw, 6-32 x 5/8	028001	
2 Screw, 8 x 1/2	032771	
2 Cable Tie	032854	
1 Cable Clamp	032821	

TO INSTALL THE KIT:

1. Remove the console back panel and the bolts securing the console top. Remove the top.
2. Remove the metal shield cover from the top of the tab-switch circuit case.
3. Remove the two brown wires from terminal "X76" of the Brite Voice Preamp Board Assembly. Connect these wires together using the wire nut provided. (See "A" on Fig. 1).
4. Solder one end of the adapter wire to terminal "X76" of the Brite Voice Preamp Board Assembly. (See "A" on Fig. 1).
5. Strip approximately 1/4 inch of insulation away from one of the yellow wires attached to the "Tremulant" tab in the 8' Accompaniment Tab Bank. Solder the other end of the adapter wire to this wire. Insulate with plastic tape. (See "B" on Fig. 1). Replace the shield, top and back panel.
6. Loosen but do not remove the four screws securing the expression housing to the wooden base of the console. (See "C" on Fig. 2).
7. Place the insulation material provided on the front lip of the connector chassis. Insert the lip under the rear of the metal expression housing base. Center the chassis behind the housing. (See "D" on Fig. 2).
8. Drill two 1/16 inch pilot holes and secure the connector chassis using the wood screws provided.
9. Re-tighten the screws securing the expression housing. (See "C" on Fig. 2).
10. Remove the Model 12 speaker cable from the console "OUTPUT" socket and plug it into the 7-contact socket on the connector chassis. (See "E" on Fig. 2).
11. Plug the adapter cable into the "OUTPUT" socket on the console. (See "F" on Fig. 2).
12. Plug the Leslie Speaker cable into the 6-contact socket on the connector chassis. (See "G" on Fig. 2).
13. Remove the first and second flathead machine screws from the right side of the metal rail on the underside of the keyboard shelf. Remove the control switches from the black wooden mounting block. Install the block under the rail using the two long screws provided.

ELECTRO MUSIC

14. Replace the control switches on the mounting block.
15. Under the keyboard shelf is a row of black Phillips head screws. Remove the second screw from the right, and place a washer on it. Pass the control cable through the plastic cable clamp, and install the clamp with this screw.
16. Route the control cable down the right-hand chrome stand and insert the plug into the 7-contact socket on the side of the connector chassis. Secure the control cable to the stand using the nylon cable ties provided. (See "H" on Fig. 2).
17. Take up any additional slack in the cable on the underside of the console using the insulated staples provided.
18. Adjust the volume as outlined in the Leslie Service Manual. The installation is now complete.

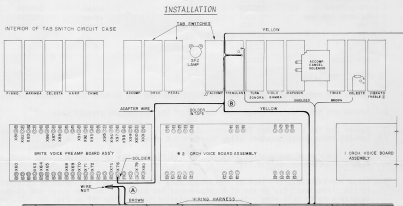


Fig. 1

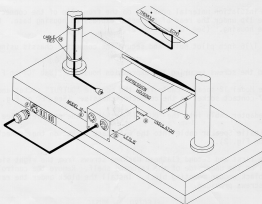


Fig. 2

1. Remove the console back panel and the bolts securing the console top. Remove the top.
2. Remove the metal shield cover from the top of the tab-switch circuit case.
3. Remove the two brown wires from terminal "X76" of the Brite Voice Preamp Board Assembly. Connect these wires together using the wire nut provided. (See "A" on Fig. 1).
4. Solder one end of the adapter wire to terminal "X76" of the Brite Voice Preamp Board Assembly. (See "A" on Fig. 1).
5. Strip approximately 1/4 inch of insulation away from one of the yellow wires attached to the "Tremulant" tab in the 8' Accompaniment Tab Bank. Solder the other end of the adapter wire to this wire. Insulate with plastic tape. (See "B" on Fig. 1). Replace the shield, top and back panel.
6. Loosen but do not remove the four screws securing the expression housing to the wooden base of the console. (See "C" on Fig. 2).
7. Place the insulation material provided on the front lip of the connector chassis. Insert the lip under the rear of the metal expression housing base. Center the chassis behind the housing. (See "D" on Fig. 2).
8. Drill two 1/16 inch pilot holes and secure the connector chassis using the wood screws provided.
9. Re-tighten the screws securing the expression housing. (See "C" on Fig. 2).
10. Remove the Model 12 speaker cable from the console "OUTPUT" socket and plug it into the 7-contact socket on the connector chassis. (See "E" on Fig. 2).
11. Plug the adapter cable into the "OUTPUT" socket on the console. (See "F" on Fig. 2).
12. Plug the Leslie Speaker cable into the 6-contact socket on the connector chassis. (See "G" on Fig. 2).
13. Remove the first and second flathead machine screws from the right side of the metal rail on the underside of the keyboard shelf. Remove the control switches from the black wooden mounting block. Install the block under the rail using the two long screws provided.
14. Replace the control switches on the mounting block.
15. Under the keyboard shelf is a row of black Phillips head screws. Remove the second screw from the right, and place a washer on it. Pass the control cable through the plastic cable clamp, and install the clamp with this screw.
16. Route the control cable down the right-hand chrome stand and insert the plug into the 7-contact socket on the side of the connector chassis. Secure the control cable to the stand using the nylon cable ties provided. (See "H" on Fig. 2).
17. Take up any additional slack in the cable on the underside of the console using the insulated staples provided.
18. Adjust the volume as outlined in the Leslie Service Manual. The installation is now complete.

PARTS LIST

CONSOLE CONNECTOR

Chassis	032763
Preamp Assy.	032953
T1	048025
S2	017954
S3	060459
S1	025205
P2	061911
P2 Cap	061739
C4, C5	025262
C3	028324
C6	018093
C1	028647

C2	028431
R10	028688
R11	024117
R4	018044
R5	024133
R7	018002
R3	018010
R13	027102
R8	018028
R12	048157
R6	018036
R9	018051
R1	028530
Q1	014944
Q2	018069
Q3	018077

ECHO CONTROL

Echo Switch Case	
brown	032904
ebony	032912
ivory	032920
Switch Case Cover	
brown	033506
ebony	033514
ivory	033522
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048116
Switch Only	029173
7-Pin Plug	029223
Mounting Block	032813

TREMOLO CONTROL

Tremolo Switch Case	
brown	029512
ebony	029520
ivory	029538
Switch Case Cover	
brown	048702
ebony	048710
ivory	048728
Switch Knob	
brown	048066
ebony	048074
Switch Retainer (2)	048108
Switch Only	042911

ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.

SERVICE INFORMATION

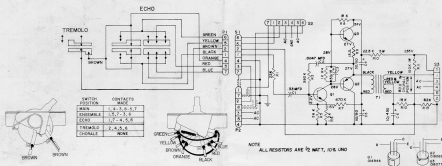


Fig. 3

Plug & Socket Pin Layout



Fig. 4

Parts List for Dick Lehmann Model 122/X66 Leslie Kit

PARTS LIST

CONSOLE CONNECTOR

Chassis	032763
Preamp Assy.	032953
T1	048025
S2	017954
S3	060459
S1	025205
P2	061911
P2 Cap	061739
C4, C5	025262
C3	028324
C6	018093
C1	028647

C2	028431
R10	028668
R11	024117
R4	018044
R5	024133
R7	018002
R3	018010
R13	027102
R8	018028
R12	048157
R6	018036
R9	018051
R1	028530
Q1	014944
Q2	018069
Q3	018077

ECHO CONTROL

Echo Switch Case	
brown	032904
ebony	032912
ivory	032920

Switch Case Cover	
brown	033506
ebony	033514
ivory	033522

Switch Knob	
brown	048066
ebony	048074

Switch Retainer (2)	048116
---------------------	--------

Switch Only	029173
-------------	--------

7-Pin Plug	029223
------------	--------

Mounting Block	032813
----------------	--------

TREMOLO CONTROL

Tremolo Switch Case	
brown	029512
ebony	029520
ivory	029538

Switch Case Cover	
brown	048702
ebony	048710
ivory	048728

Switch Knob	
brown	048066
ebony	048074

Switch Retainer (2)	048108
---------------------	--------

Switch Only	042911
-------------	--------

ORDERING PARTS:

Standard hardware, connectors, and electronic components should be purchased locally. Non-standard items may be obtained through a Leslie speaker dealer, or from Electro Music. Orders should include part numbers, as shown above.

Installation Instructions for Dick Lehmann Model 122/X66 Leslie Kit

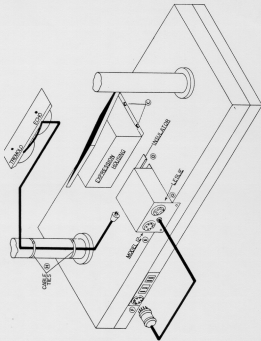


Fig. 2

SERVICE INFORMATION

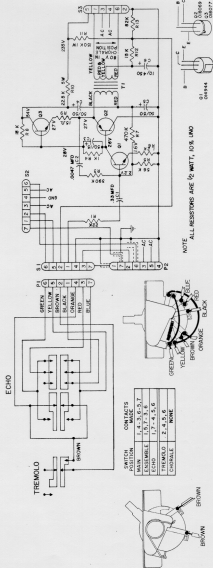


Fig. 3

Plug & Socket Pin Layout

 


Fig. 4