

HAMMOND MODEL J-100

013342

ADAPTER



General

This adapter is used with a 126 Console Connector Kit. The Adapter supplies the signal and A. C. power from the organ console to the connector kit. This kit and adapter will work with the following Leslie Models: 120, 125, 145, 147 and 247. Set the speaker load resistor to 8 ohms on Models 145, 147, 247.

Installation

1. Mount 26-1 Chassis of 126 Console Connector Kit at position J. Use screws provided.
2. Mount switch cases on front of organ and route cable into rear compartment of organ as described in 126 Console Connector Kit instructions. Plug them into their respective sockets on Chassis "J".
3. Insert 5 contact socket of adapter to 26-1 chassis position "K".
4. Remove Connector from terminal position "G" and insert into male Connector from adapter position "H". Push sleeving over terminals.
5. Connect female Connector from adapter to terminal position "G". Push sleeving over terminals.
6. Plug seven pin plug of adapter into socket position "I".
7. Plug Leslie Speaker cable into socket position "L".

For further information check Owner's Service Manual of Leslie Speaker.

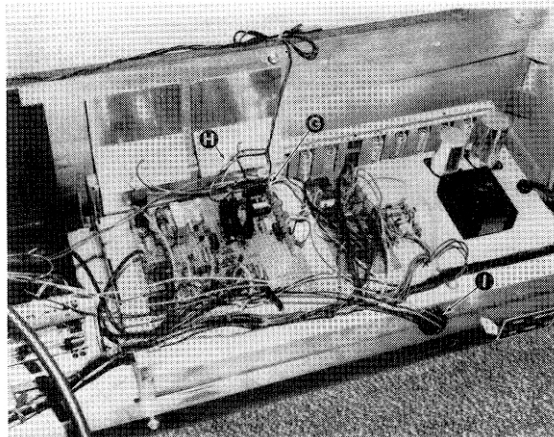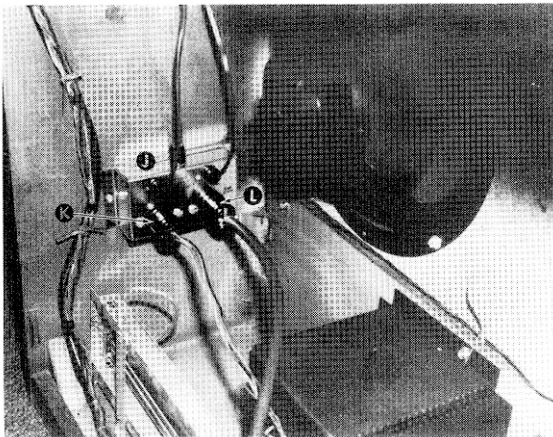

013342 ADAPTER

