



117V ADAPTER 138851

INSTALLATION INSTRUCTIONS

FOR USE WITH: Various 1- and 2-channel organs
LESLIE 11-conductor (new series) speakers

By use of this adapter specified organs with a 9-contact output socket (built-in or installed as part of a console connector kit) can be attached to and operate an 11-contact "new series" LESLIE speaker

The adapter is to be used with a 30-foot, 11-conductor LESLIE speaker cable part no. 137357.

INSTALLATION

On the back of the organ, locate the 9-contact socket provided for connecting a LESLIE speaker to the organ. (See figure 1.)

Attach the adapter to this socket.

Connect the 11-conductor cable (part no. 137357), which attaches to the LESLIE "new series" speaker, to the 11-contact socket of the adapter.

Adjust the volume levels of the LESLIE speaker as described in the owner's manual for the speaker.

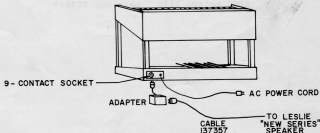


Figure 1. Installation

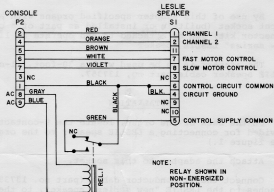


Figure 2. Schematic, Adapter 138851

SPDT relay, 117V part no. 027649